


MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL

**Switch the lights on and off.
Open and close the garage.
Just using your Android mobile phone.**

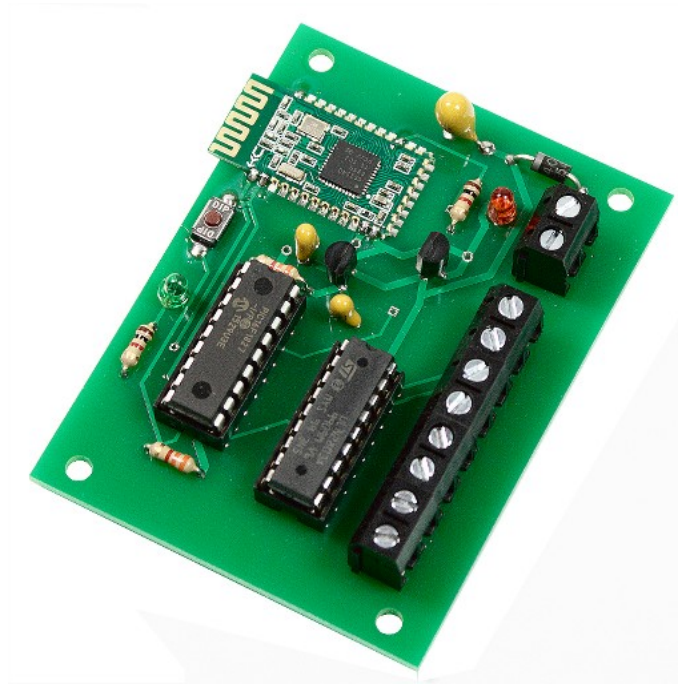

Mobotronix Limited
Askillaun
Roonagh Point
Westport, Co. Mayo
F28 AK79
Ireland




Phone +353 98 39188
Fax +353 98 39189
E-Mail sales@mobotronix.ie
www.mobotronix.ie



MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL

CONFIGURATION (device name, secure code, buttons)

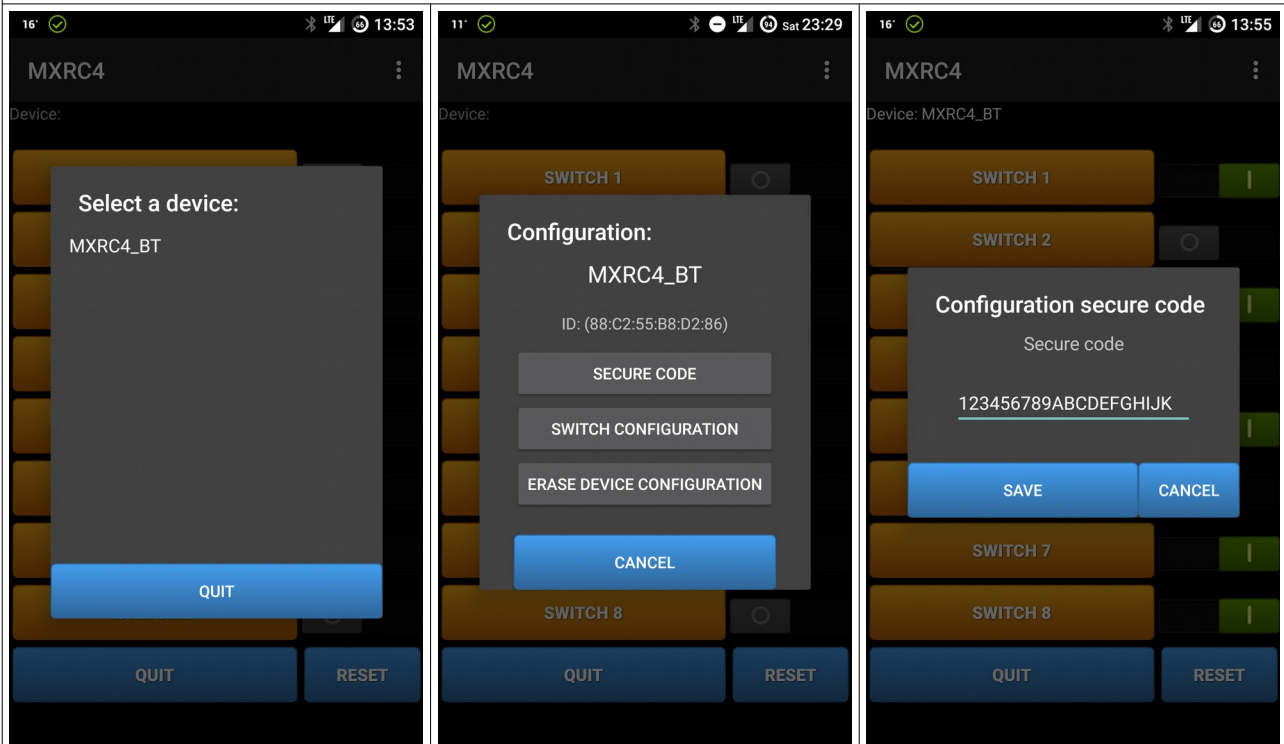

- start MXRC4 application
- press the device key until the configuration menu appears (see next picture)


- configuration menu
- use CANCEL to go back

- here you can change the secure code
- !! if you use another secure code than the one saved in the MXRC4, your MXRC4 will not accept any commands !!
- this configuration is for additional Android mobile phones, where the secure code is known

MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL

CONFIGURATION (device name, secure code, buttons)

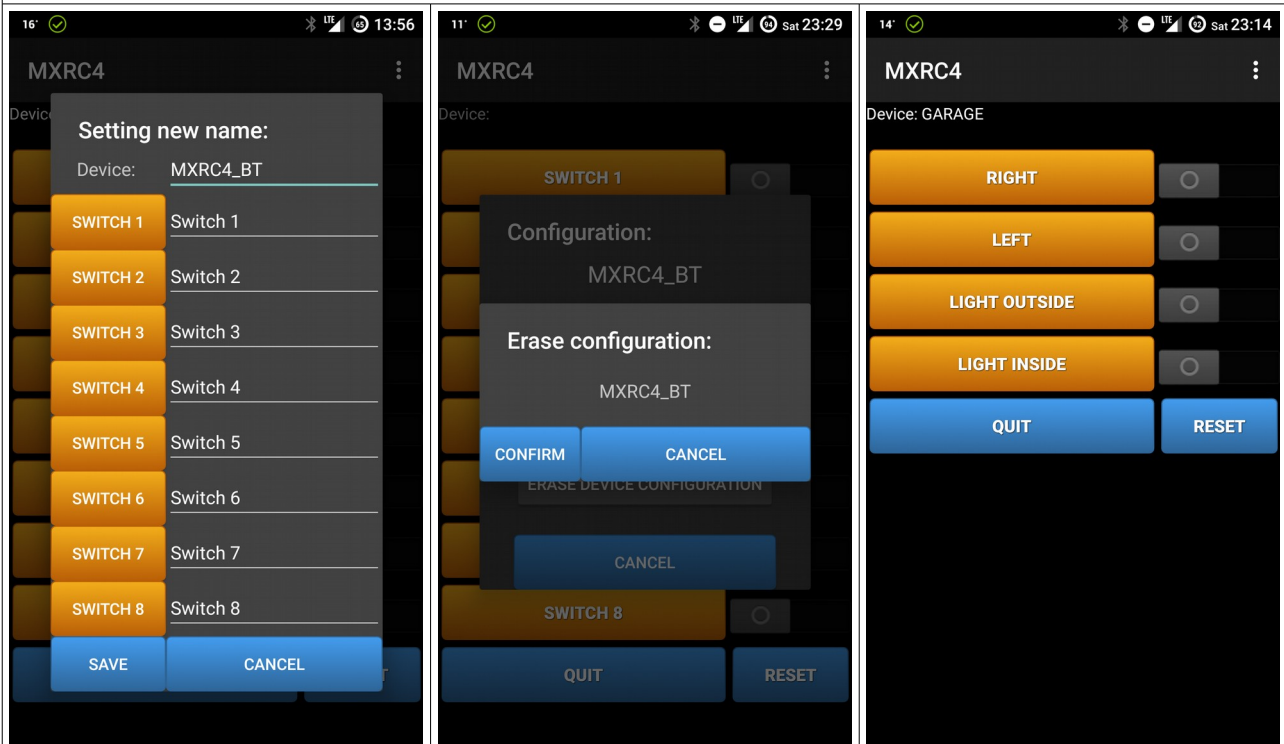

- the device name can be changed (within the MXRC4 application only, the name of Bluetooth device will not be changed)
- the buttons can be renamed (if text deleted = this button will not be visible during operation)
- don't forget to save the configuration


- erase the complete configuration for the selected device

- here is an example for a device named Garage with only four buttons

MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL

DAILY USE

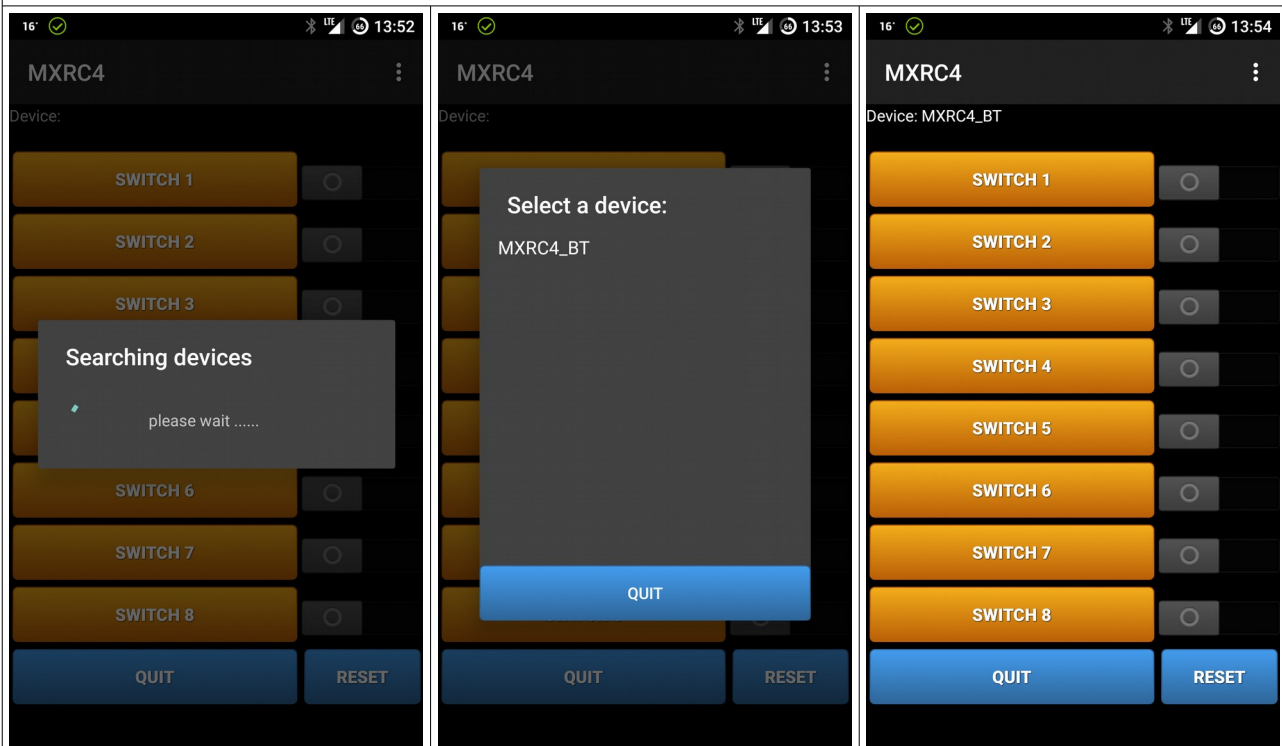

- start application
- your mobile phone is connecting


- select the device needed

- after a successful connection, the saved configuration (or the standard configuration, if there is no configuration available) appears on the screen
- the switches on the right side show the state of the relays
- if a relay was not switched off, it will be shown here (see next picture)
- the yellow buttons switch the relays on and after 500ms off
- the buttons on the right side switch the relays manually on and off

MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL




DAILY USE

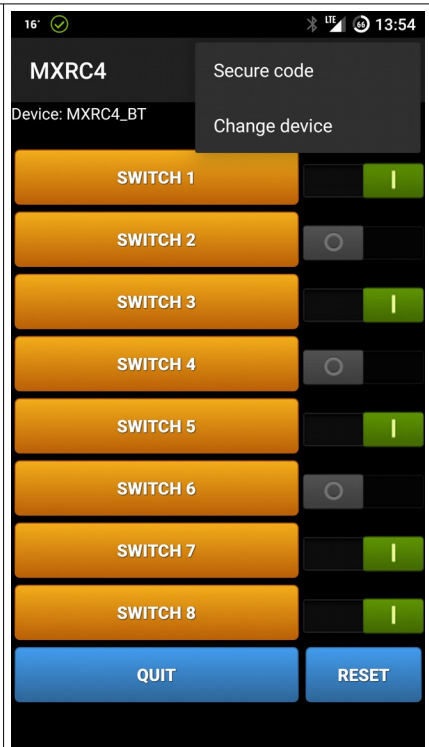		
<ul style="list-style-type: none"> the relays 1, 3, 5, 7, 8 were not switched off, and are still ON each of the relays can be manually switched on and off by pressing the « 0/I » switch on the right side the yellow buttons switch the relays on and after 500ms off the RESET button will switch all relays OFF 	<ul style="list-style-type: none"> pressing the MENU button on your Android mobile phone, a menu appears on the screen Change device : select another device (see next picture) Secure code : goes to MXRC4 PROGRAMMING 	<ul style="list-style-type: none"> select a device or press QUIT to exit the application

MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL



MXRC4 PROGRAMMING

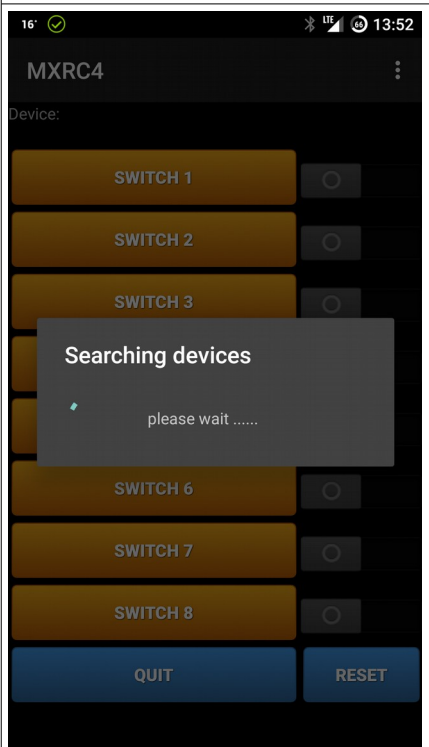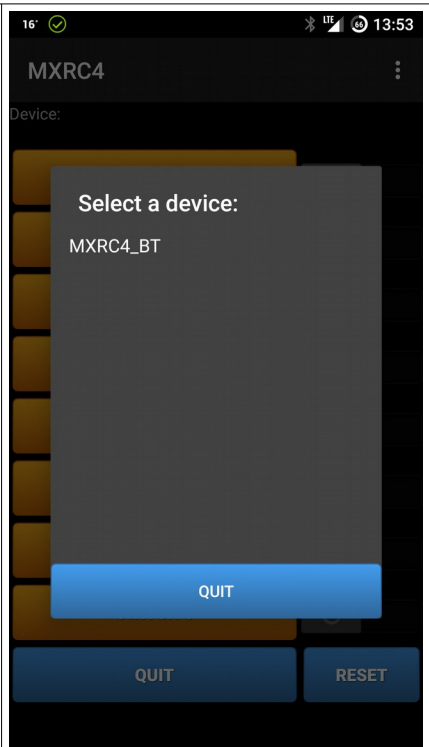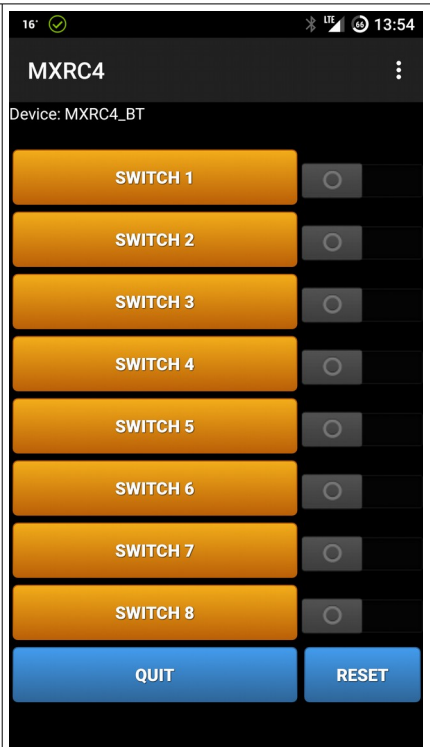		
<ul style="list-style-type: none"> start MXRC4 application 	<ul style="list-style-type: none"> select a device 	<ul style="list-style-type: none"> the switches appear on the screen

MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL

MXRC4 PROGRAMMING

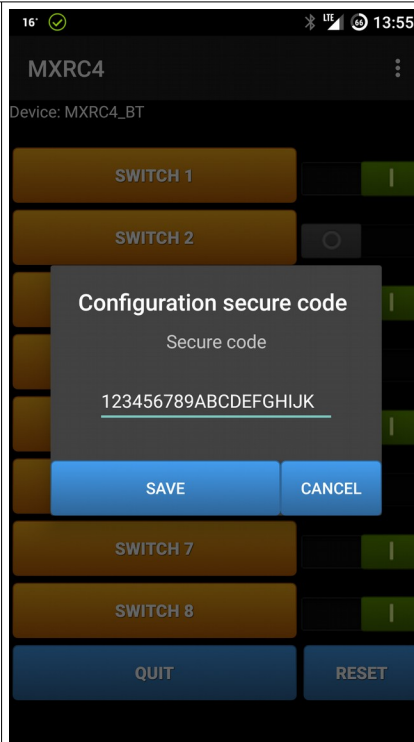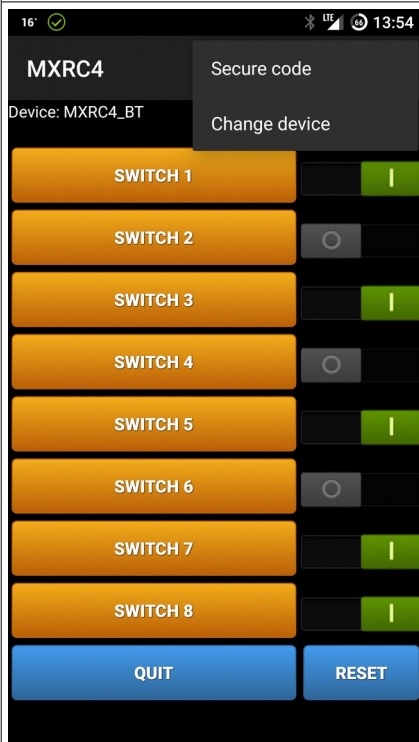


- press the MENU button on your Android mobile phone
- press « Secure code »

- change secure code
- press SAVE
- green LED on the MXRC4 module starts blinking
- press the button on the MXRC4 module for 2 seconds
- if the Bluetooth module disconnects, the secure code will not be saved on the MXRC4 and the mobile phone
- if all is going wrong, set the MXRC4 module to factory settings (see manual), and retry with the factory settings codes

MXRC4

8 CHANNEL BLUETOOTH 4.0 REMOTE CONTROL SOFTWARE MANUAL

MXRC4 TIMER

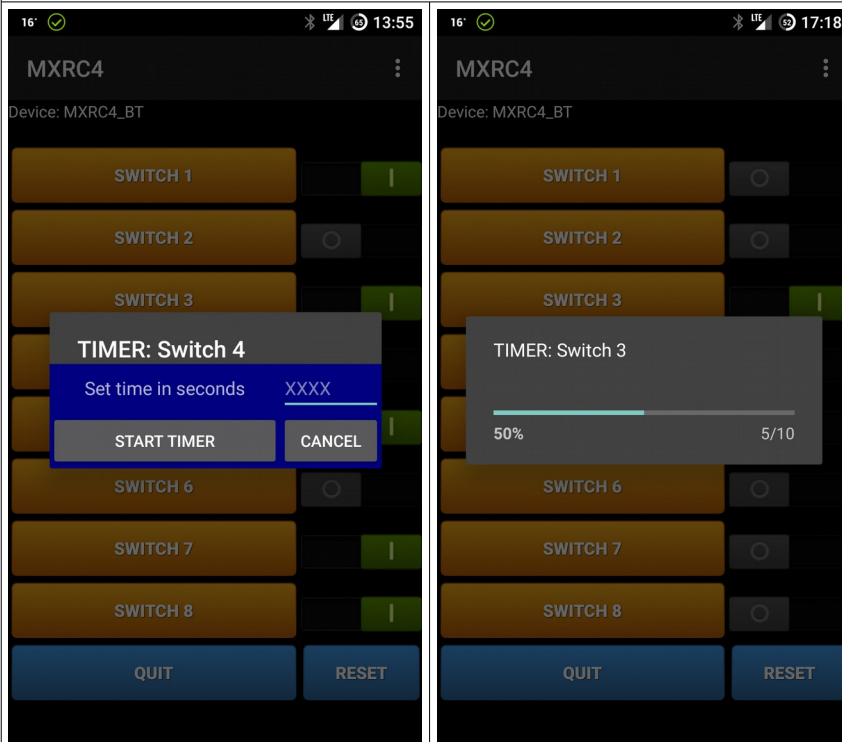

- press a yellow button until the timer menu appears
- set the time in seconds
- press start or cancel

- the selected relay will connect or disconnect (it depends on the state of the relay before starting the timer) during the seconds set before
- to cancel the timer press the back button