


MXRC4

8 CHANNEL BLUETOOTH REMOTE CONTROL PROGRAMMING MANUAL

**Switch the lights on and off.
Open and close the garage.
Just using your Android mobile phone.**

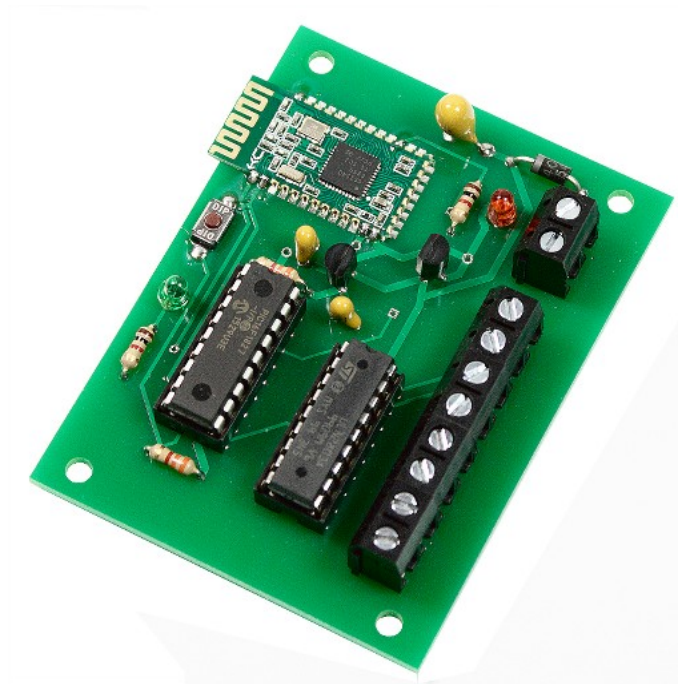

Mobotronix Limited
Askillau
Roonagh Point
Westport, Co. Mayo
F28 AK79
Ireland



Phone +353 98 39188
Fax +353 98 39189
E-Mail sales@mobotronix.ie
www.mobotronix.ie



MXRC4

8 CHANNEL BLUETOOTH REMOTE CONTROL PROGRAMMING MANUAL

MXRC4 commands	
<ul style="list-style-type: none"> ◆ AT+40\n ◆ AT+[R][ON/OFF]\n ◆ AT+01\n ◆ AT+02\n ◆ AT+03[R]\n 	<ul style="list-style-type: none"> ◆ Login ◆ Set relay R to ON/OFF ◆ Change password ◆ Reset all relays ◆ Set relay R to ON for 500msec
Data flow	
<ul style="list-style-type: none"> • AT+40\n • [20 characters password]\n 	<ul style="list-style-type: none"> • LOGIN\n • OKXXXXXXXX\n (status of all relays 1/0) or ERROR\n • the password must be sent within 6 seconds after LOGIN\n, otherwise the command AT+40\n has to be sent once more
<ul style="list-style-type: none"> • AT+[R][ON/OFF]\n (R = 1-8, ON/OFF = 1/0) 	<ul style="list-style-type: none"> • OKXXXXXXXX\n
<ul style="list-style-type: none"> • AT+01\n • [20 characters password]\n • [new 20 characters password]\n 	<ul style="list-style-type: none"> • OPW\n (old password) • NPW\n (new password) • green LED blinks, press button for 2sec • UPDATED\n
<ul style="list-style-type: none"> • AT+02\n 	<ul style="list-style-type: none"> • OKXXXXXXXX\n
<ul style="list-style-type: none"> • AT+03[R]\n (R = 1-8) 	<ul style="list-style-type: none"> • Set relay R to ON for 500msec • OKXXXXXXXX\n
\n = 0x0A OK[R1][R2][R3][R4][R5][R6][R7][R8]\n 20 characters password = 0-9, A-Z, a-z	
Factory Settings	
<ul style="list-style-type: none"> • Bluetooth device name : MXRC4_BT • secret code (alphanumeric : 0-9, A-Z, a-z) : 123456789ABCDEFGHIJK 	